


BEADED SWIMMING POOL LINER INSTALLATION INSTRUCTIONS



FIG. A
Use with bead receiver

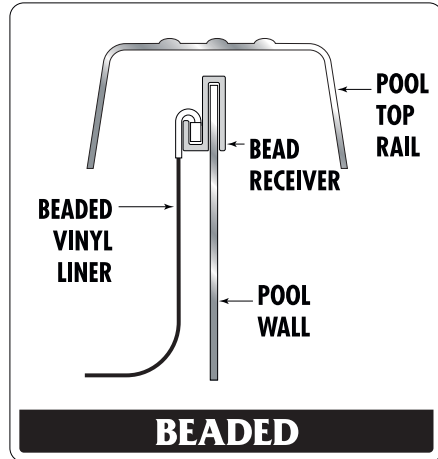

Please follow the beaded liner instructions below (**Fig. A, Fig. B & Fig C**) for proper installation:

A beaded liner must be inserted into a track (bead receiver) situated along the top of the pool's perimeter. When using a beaded liner, make sure the bead head lip is facing downward, towards the bottom of the pool, as you insert it into the track.


Warning: Failure to follow installation instructions will damage the pool liner and void the warranty!

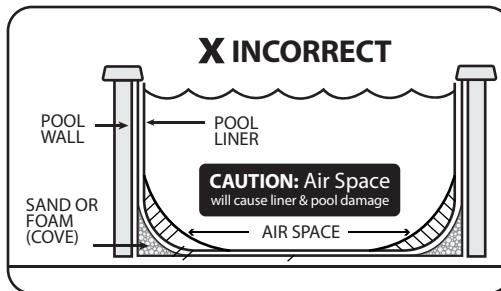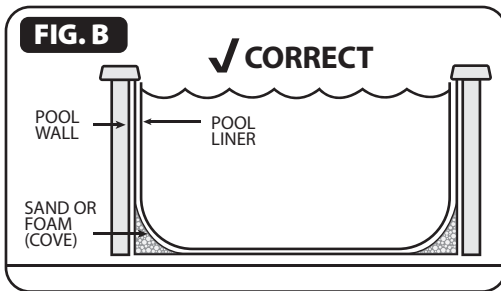

An improperly installed liner will not support the weight of the water, causing liner and pool damage, which is not covered by the warranty.

A properly installed liner must be supported by the ground, sand base and cove.

Make sure that you form a 6" x 6" cove by compacting the mason sand around the inside perimeter of the pool area. A preformed Styrofoam cove can also be used in place of the sand cove. **See Fig B.** For either type of installation, unfold and orient the bottom of floor of the liner in the pool. Lay out the liner so that the floor of the liner is centered exactly top to bottom and left to right. If it is a rectangle pool, ensure the corners line up exactly. Smooth out the floor of the liner by pushing it toward the pool wall. A soft push broom will be very helpful. **Never forcefully pull or drag the liner.**

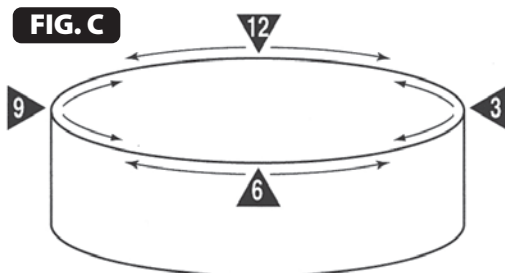

Refer to the instructions that came in your pool manual about setting up the liner in addition to these instructions because they will vary slightly from each manufacturer.

Now you are ready to attach the wall of the liner to the pool. You should attach the liner on the wall in about 6 or 8 places. If you have a rectangle pool, start with each corner. Then again in the middle of each straight wall. On ovals, start at the beginning of each radius in 4 places and then in the center of the two radius areas and straight sides. On round pools, begin at the 12, 3, 6 and 9 o'clock positions. Use masking or electrical tape, if necessary, to hold the liner in place. Make sure that you attach the wall perpendicular to the floor of the pool. Then,

from any two positions, work the liner onto the wall to the center. Continue until you have the liner in the bead receiver all the way around. If you do not attach the wall in this manner and begin from one location and work your wall completely around the pool, one of two situations will exist. Either you will have an excess of material or flap on the circumference of the wall or you will be short and have to stretch the material to make it fit. **See Fig. C.**