

Retro Fit Barrier Kit
Barrier Kit for Ladder Models #6000, #6100, #7000 and #7100

Parts List

4 - #10 x 1-1/4" Sheet Metal Screw

1 – Upper Brace

1 – Lower Base

1 – Small Barrier Section

1 – Large Barrier Section


1 – Strip of 4 Foam Pads

Ladder must be assembled according to Instructions before installing Barrier Kit. Ladder must be removed from Swimming Pool before installing Barrier Kit.

- 1. Snap Small and Large Barrier Sections into slots on Lower Base as shown.**



- 2. Separate Barrier sections at the top slightly and position Upper Brace over Small Barrier Section. Next, spread the “fingers” on the Upper Brace and slide into position on the Large Barrier Section.**

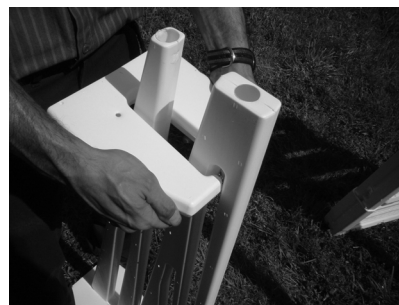

See other side

Retro Fit Barrier Kit
Barrier Kit for Ladder Models #6000, #6100, #7000 and #7100

- 3. Place the Base and Brace into position, centered, on the bottom and fourth treads of the ladder. Install the 4 #10 x 1-14 screws on a slight angle as shown, first in the Upper Brace, and then in the Lower Base.**



- 4. Install the self-adhering foam strips to the Large Barrier Section as shown. Finally, install the Ladder in the Swimming Pool according to the Instructions provided with the Ladder.**

Note: Barrier sections must be filled with water to prevent floating.



CONFER PLASTICS, INC.
97 WITMER ROAD
NORTH TONAWANDA, N.Y. 14120-2421
www.conferladders.com

PRINTED IN USA